


QUESTION

How do I show sloped insulation on a flat roof?

ANSWER

Insulation can be built as a component within your roof type. You can specify if the insulation is a consistent thickness or if it is tapered using the 'variable' option.


- Select your roof and choose "Edit Type".
- "Edit" the structure of your roof.
- Check the box for variable for the insulation component.

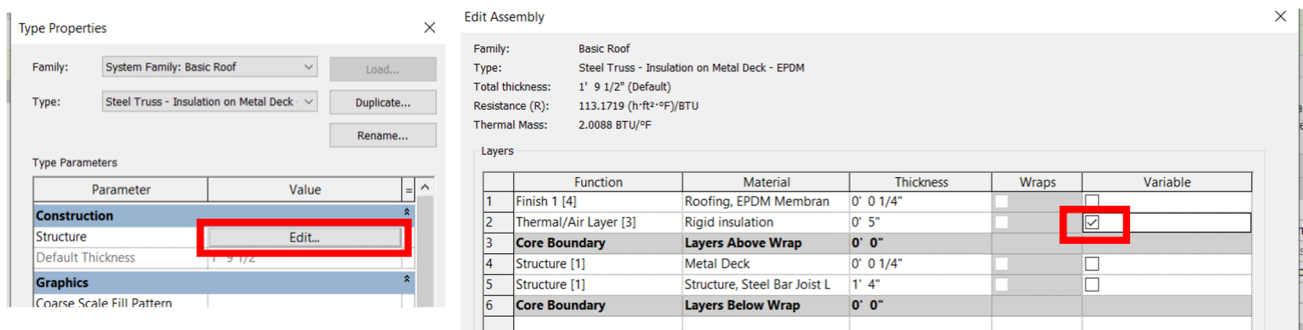

FLAT ROOF



 MODIFIED FLAT ROOF
WITHOUT VARIABLE
THICKNESS FOR
INSULATION LAYER



MODIFIED FLAT ROOF
WITH VARIABLE
THICKNESS FOR
INSULATION LAYER



To pitch a flat roof, add points or a split line to its surface, and then adjust their elevation relative to that surface. The points and split lines can be adjusted afterwards using the "Modify Sub Elements" tool.

